


<b>OCTAVE DOWN</b>	<b>OCTAVE UP</b>	<b>RESET</b> THE A# (-1) KEY IS THE MAIN RESET KEY FOR THE CHIP MAESTRO. IT WILL DEFAULT TO 'POLY MODE'	<b>MODE SELECT</b> C(0) SWITCHES BETWEEN THE THREE PLAY MODES: 1. POLY 2. ARPEGGIO 3. GLIDE	<b>SOUND SELECT</b> D(0) ENABLES PROGRAM MODE E(0): TRIANGLE F(0): SQUARE 1 G(0): SQUARE 2 A(0): NOISE CHOOSE SOUNDS + PRESS D(0) AGAIN TO EXIT PROGRAM MODE	<b>PULSE WIDTH</b> C#(0) TOGGLES PULSE WIDTH FOR SQUARE 1  D#(0) TOGGLES PULSE WIDTH FOR SQUARE 2	<b>ARPEGGIO SETTINGS</b> E(0) CYCLES THROUGH WAVE TYPES USED IN ARPEGGIO MODE  F(0) SETS THE DIRECTION OF THE ARPEGGIO UP, DOWN, OR BACK AND FORTH	<b>PITCH BEND RANGE</b> F#(0) ALTERS THE RANGE OF THE PITCH WHEEL  <b>NOISE WAVE SETTINGS</b> G(0) ALTERS THE QUALITY OF THE NOISE WAVE CHANNEL

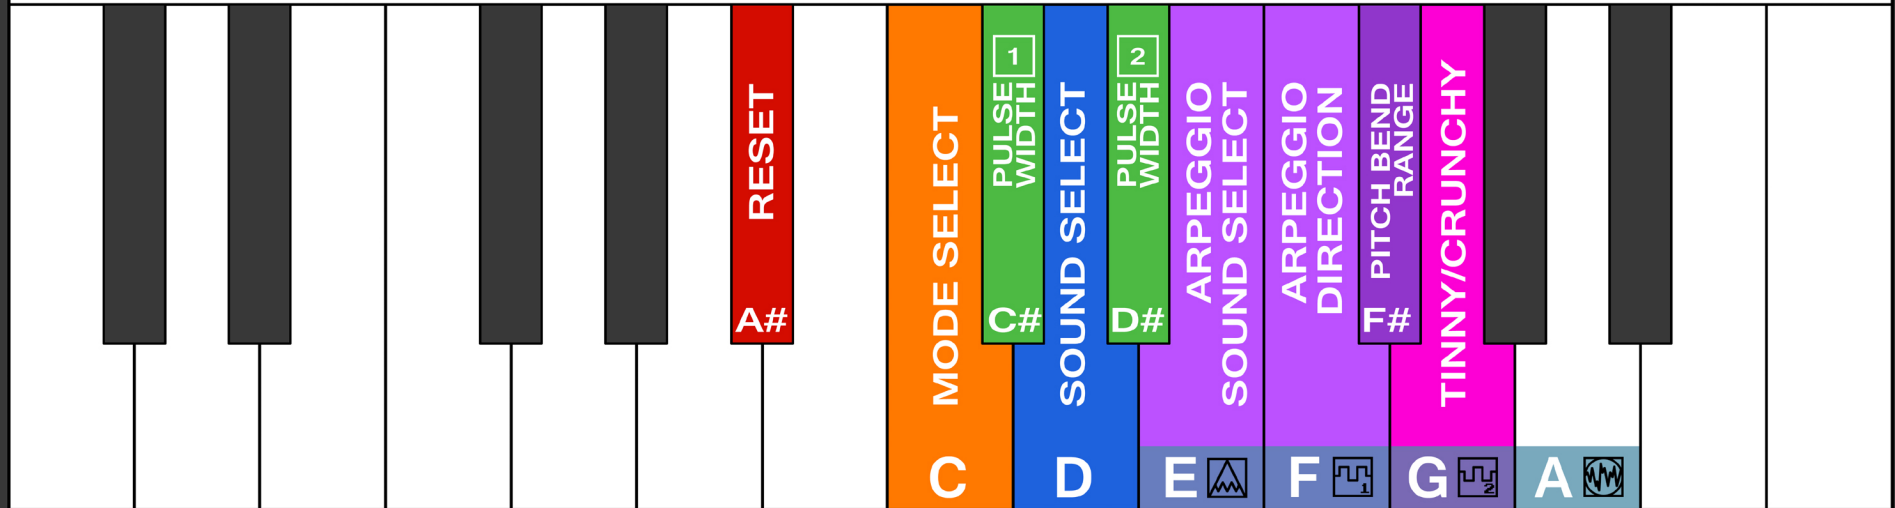

**QUICK REFERENCE CHART FOR YOUR CHIP MAESTRO**  
**SETTINGS CAN BE MADE IN THE LOWEST OCTAVE OF YOUR MIDI KEYBOARD**